


NETWORKS

VISUAL FAULT LOCATOR USER MANUAL



Visual Fault Locator



Note: Please properly install the batteries. Switch in middle for power off, switch up for CW output, switch down for glint output.

Caution: IMPROPERLY OPERATION WILL CAUSE A DEVICE DAMAGE! ALWAYS MAKE SURE:



1. Do not use inferior fiber pigtail or patch cord;
2. The connector must be well polished;
3. Always VERTICALLY insert and pull out the connector of fiber. Otherwise, the ceramic tube may be broken.

Test Show

(Step1)



(Step2)



You can choose a continuous wave output mode for steady fault illumination or a flashing output mode by pushing the switch up and down.

Compact and intelligent design makes it a good assistance in locating breakpoints of a fiber.

Detailed parameter

Wave output	650nm
Fiber connector	universal-connector
Operating temp.	0~+60°C
Store temp.	-20~+70°C
Battery style	LR6 (AA) 1.5V*2
Battery life	>40H
Size	175mm*26mm*26mm
Weight	170g



www.fs.com

Copyright© 2009-2017 FS.COM. All Rights Reserved.